


# ECB5240M Wall Mounting Template

PN 0535-0075-000

MT1279/0416


PG. 1 of 2

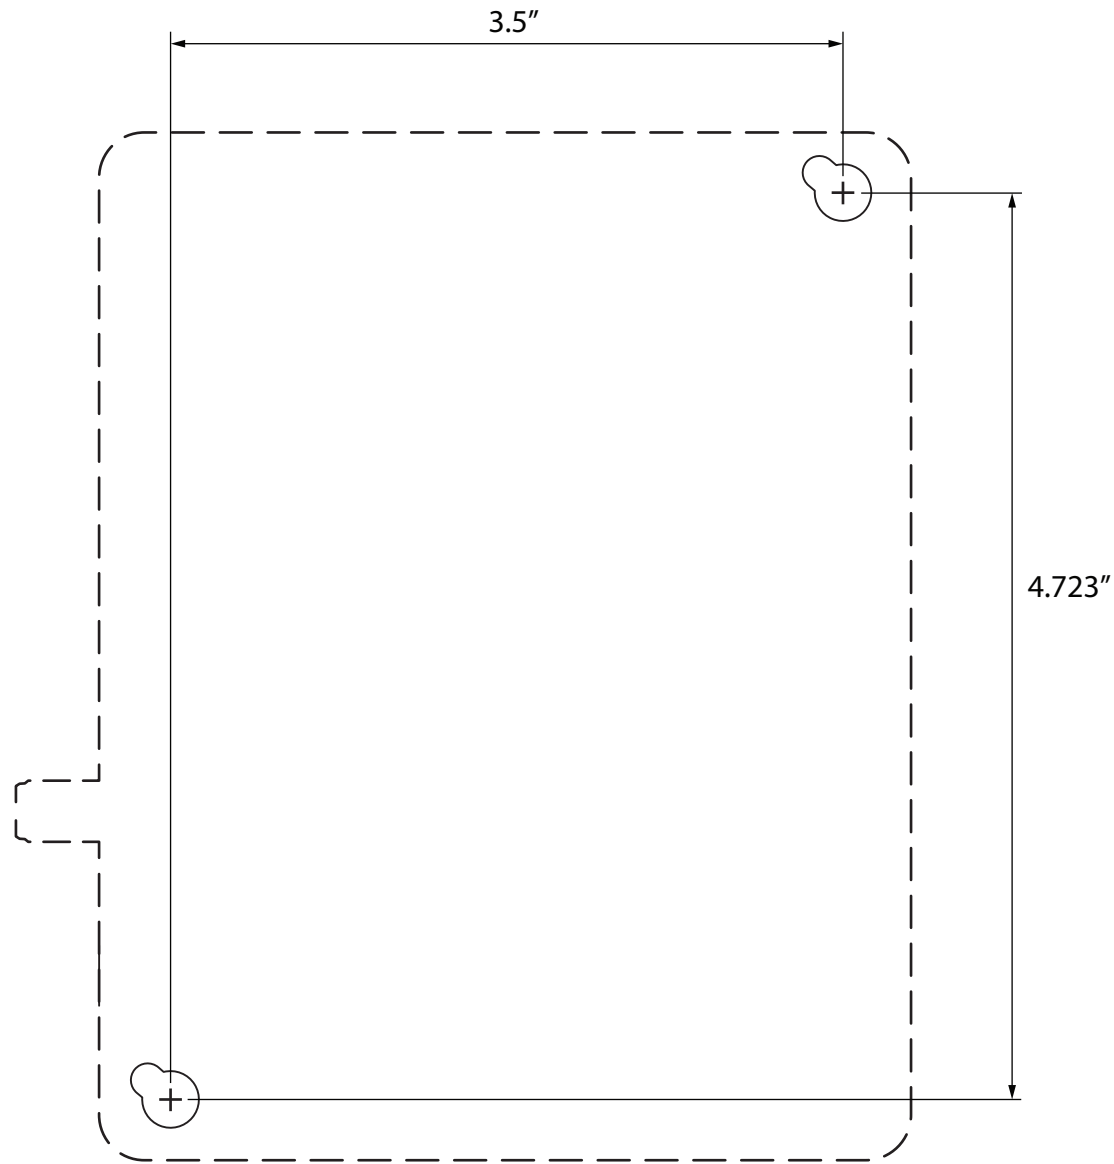

Print on letter size paper  
(8 1/2" x 11"). Choose 'actual  
size'. DO NOT SCALE.

### Fasteners Required (Not Included)

- Two #5 screws (length sufficient for wall material)
- Two drywall anchors (if mounting on drywall)

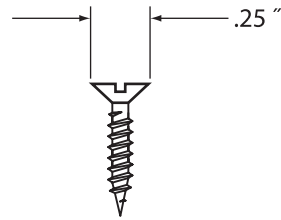

(2) Flat Head Screws




(2) Plastic Screw Anchors

### Tools Required

- Pencil or other marking device
- Screwdriver
- Electric or cordless drill (if using drywall anchors)
- 3/16" drill bit (if using drywall anchors)

Illustrations Not to Scale

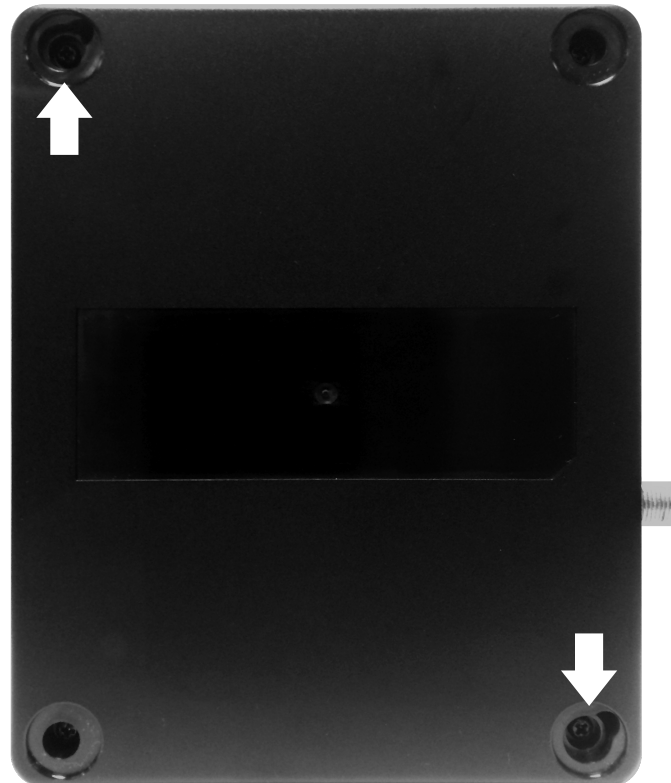

### Mounting Instructions

1. Place the template on the wall in the position the extender will be mounted.
2. Mark the mounting holes. If mounting on wood, drill holes for the screws. If mounting on drywall, drill holes to accept drywall anchors then gently tap in the drywall anchor up to the thread using the handle of the screwdriver. Then use the screwdriver to install the anchor into the wall.
3. Next install the screws into the anchors leaving the screws extended about 0.2 inches from the wall.
4. Locate the extender keyhole openings over the screw heads and push down lightly on the extender to lock it onto the screws.

