


ECB6000 Wall Mounting Template


PN 0535-0003-000 Rev 001

MT1239/1114

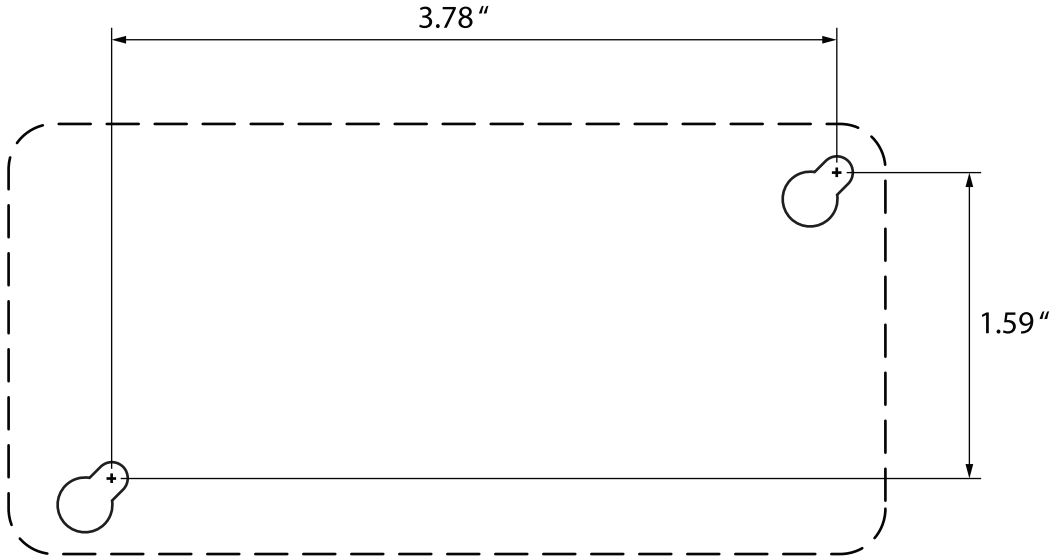

1. Place the template on the wall in the position the network extender will be mounted.
2. Mark the mounting holes. If mounting on wood, drill holes for the screws. If mounting on drywall, drill holes to accept drywall anchors. A 3/16" drill bit is recommended for plastic anchors.
3. Leave screws extended about 0.2 inches from the wall.
4. Locate the network extender keyhole openings over the screw heads and push down lightly on the network extender to lock it onto the screws.

Fasteners

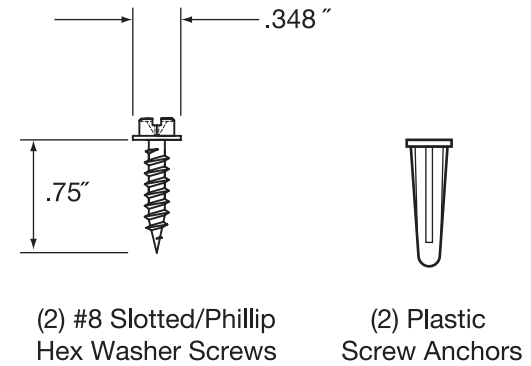

Illustrations Not to Scale

